

Ultrasonic(Thermostat) Ink Tank



Model No : Ultrasonic(Thermostat) Ink Tank

Product Name : Printer Parts

FOB Port : NINGBO PORT

Payment terms: T/T, L/C or negotiate

Contact Person : Ms.Suaad Fan

Delivery Lead Time : 7-20days

View PDF file :  Ultrasonic(Thermostat) Ink Tank

View Word file :  Ultrasonic(Thermostat) Ink Tank

The Detail Description of Ultrasonic(Thermostat) Ink Tank :

Technical Parameter :

Power: AC220V 50HZ <=1A

Volume: 3.5L

Circulated operating time: working 5--8 Min ; Stop 60-120 Min

Ink temp.: 26-38

Start to use:

1. Clean the inner part of the tank with solvent. Avoid liquid flow into the bottom part of the tank.
2. Pour the ink into the tank and screw up the cover tightly. Please keep the ink level between "Min." and "Max".
3. Unscrew the Ink tube port and put the ink tube from the printer into the tank and screw up the Ink tube port tightly. The end of the tube should be lower than "Min." level.
4. Plug on the power cable and switch on. It will running automatically.
5. When the printer does not work, please switch it off.



Ningbo MEC Industry And Trade Co., Ltd.

Tel : 0086-574-66831478/ 87383760

Fax : 0086-574-87383750

Email : sales@nbmec.com , sales@signmaker.cn

Website: : www.nbmec.com , www.signmaker.cn

Caution:

1. No liquid flow into the bottom of the tank.
2. The end of the tube should be lower or equal to the "Min."

the ink level should be between "Min" and "Max." Running the tank when ink level lower than "Min." is prohibited .

3. Please do not open the bottom of the tank without professional staff's permit .

Download the installation guide

If you have any further inquiry, please feel free *Mail to me*

Address : 3F,NO.333 DAZHA ROAD JIANGBEI DISTRICT,
NINGBO ZHEJIANG,,P.R.CHINA Postal code: 315020

Tel: (86) 574 66831478/87383760, Fax: (86) 574 87383750